


Commercial accessibility
WITHOUT COMPROMISE




Savaria Lux & Prestige
V-1504 Vertical Platform Lifts



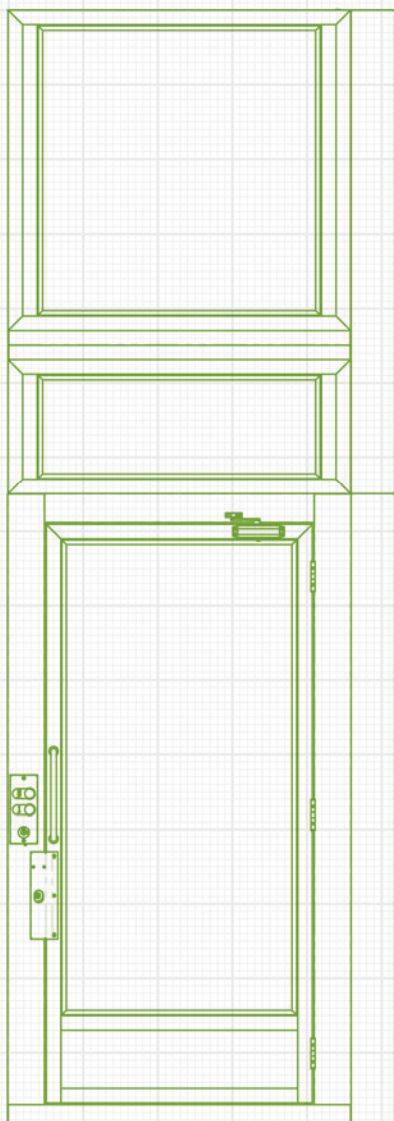


Choose the Savaria Luxury Framed (Lux) lift, or the Prestige Frameless lift for commercial settings including hospitality spaces, office buildings, places of worship, museums and art galleries or retail environments. Barrier-free access can also be beautiful – without design compromise.

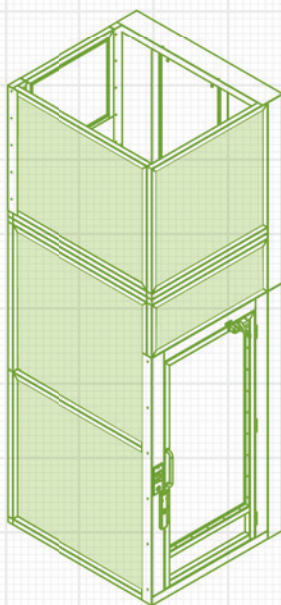

LUX

LUXURY FRAMED


Framed in 304 stainless steel finish No.4, with tempered or laminated quarter inch glass inserts, the Lux lift marries accessibility and beautiful design. This lift can be configured for travel of up to 10 feet with entrance and exit on the same side, or at 90 degrees for up to 4 stops. Add optional automatic features such as swing door or gate operators, add a full sized top landing door, or stainless steel gate.

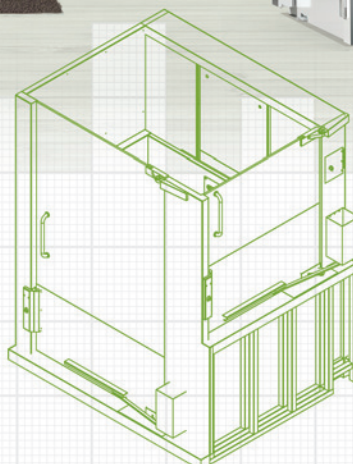

PRESTIGE

PRESTIGE FRAMELESS

Half inch structural tempered glass with no visible frame makes this lift the ultimate statement in barrier free access in commercial settings. The Prestige can be configured for up to 6 feet (72") of travel with 2 stops. A full sized glass door is included for the lower landing with a half sized glass gate at the top. Customize the Prestige with a full sized top landing door or custom platform size.

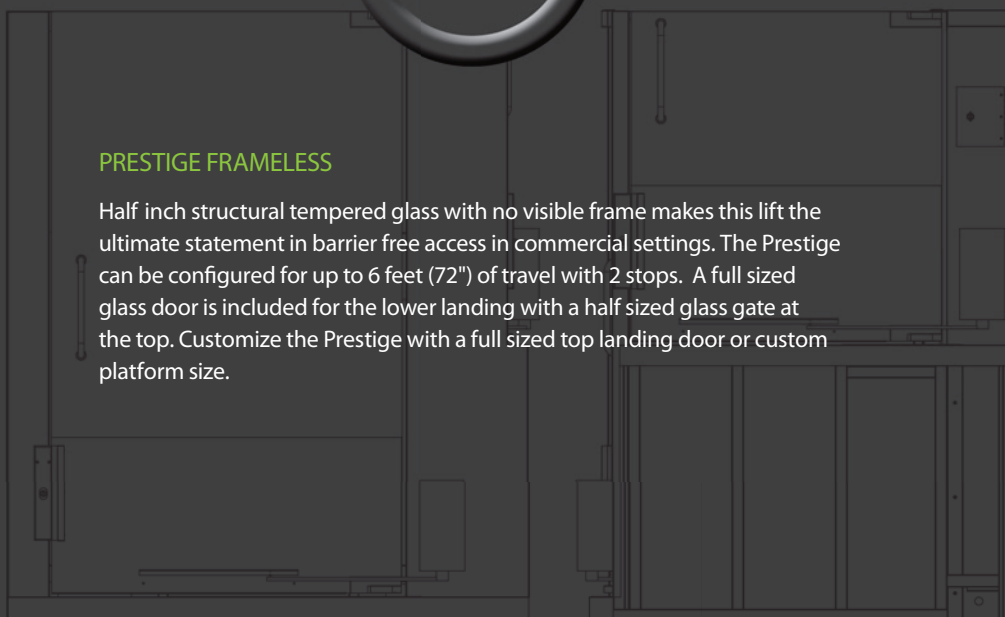

PRESTIGE



LUX



STANDARD FEATURES


- Reliable, smooth operating hydraulic drive system
- ADA compliant platform 36" by 54"
- Machine roomless design with drive housed in travel tower

SPECIFICATIONS

Applications	Residential, commercial, indoor, outdoor for Lux only
Capacity	750 lb (340 kg)
Maximum travel distance	72" Prestige, 120" Lux, consult factory for higher travel
Platform size	36" x 54", or custom size
Nominal speed	20 ft/min (0.1 m/s)
Levels/stops	2 Prestige, 2-4 Lux
Power supply	110 volt, 20 amp, single phase, 60 Hz
Drive system	2:1 roller chain, hydraulic
Motor pump	1 hp, gear-type
Controller	Relay logic
Warranty	36 month parts, ask for details

OPTIONS

42" top landing stainless steel gate, automatic door/gate operation, full height 80" door at top landing, 90 degree exit, ADA phone, custom platform size, battery back-up operation. Lux options only: additional stop, plexi dome top, outdoor package, intermediate stop doors. Framed option available for travel above 72" on the Prestige lift. Please consult your authorized Savaria dealer or contact us for more information and additional options.

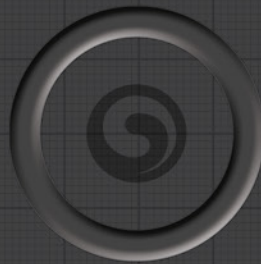

 savaria.

www.savaria.com

2 Walker Drive, Brampton, ON L6T 5E1 Canada

tel: 800.661.5112 fax: 905.791.2222